


## OVEN CLEARANCES

- Allow at least 4" (10 cm) of clearance around top of oven. Proper air flow around oven cools electrical components. With restricted air flow, oven may not operate properly and life of electrical parts is reduced.
- There is not an installation clearance requirement for the back of the oven
- Allow at least 1" (2.54 cm) of clearance around sides of oven.
- Install oven so oven bottom is at least 3 feet (91.5 cm) above floor.

## CONTROL PANEL FEATURES

- USB Port
- Display
- UP keypad
- DOWN keypad
- POWER ON/OFF keypad
- MENU Keypad
- Number Keypads
- STOP/RESET Keypad
- START/OK Keypad

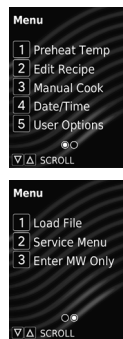


## MENU SCREENS

### Page 1

- Preheat Temperature
- Edit Recipe
- Manual Cook
- Date/Time
- User Options

### Page 2

- Load File
- Service Mode
- Enter MW Only

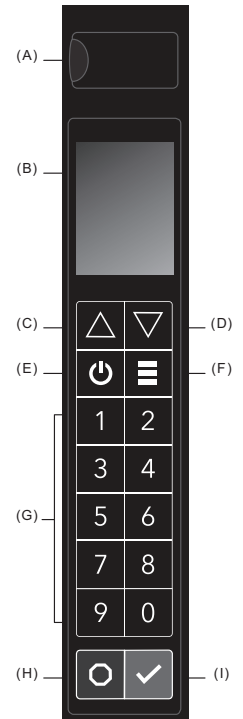

## So...how do I use it?

### Edit Oven Preheat Temperature

This oven can be set to a preheat temperature between 200°– 475°F (95°– 250°C) .

- Press MENU (≡) keypad. MENU screen will display.\*
- Press number "1" keypad to access "Preheat Temp".
- Press number keypads to enter desired preheat temperature.
- To save changes:** Press START/OK keypad.
- To discard changes:** Press STOP/RESET keypad.

### Preset Recipe Keypads

To cook food using preprogrammed cooking sequences. Oven must be preheated before cooking. From READY or DOOR OPEN screen:

- Open oven door, place food in oven, and close oven door.
- Press desired number keypad(s).
- Oven operates and time counts down.
- At the end of the cooking cycle, the oven beeps. Carefully remove food from oven.

*\*Note: If PIN Code is enabled, your unique 4 digit pin code will be required to access Menu Screen*

### Power-On, Preheat

Press POWER ON/OFF keypad to begin preheating. WARMING UP screen displays. READY screen will display once oven reaches the specified preheat temperature. The factory default preheat setting is 475°F (250°C).

### Manual Cooking Mode

Allows operator to heat without changing the preset recipe keypads.

Oven must be preheated before cooking. From READY or DOOR OPEN screen:


- Open oven door, place food in oven, and close door.
- Press MENU (≡) keypad. MENU screen will display.\*
- Press number "3" keypad to access "Manual Cook".
- To navigate to editable fields:** Press UP/DOWN (▲▼) keypads. Active field will be highlighted in red. Editable fields include: Oven Temperature; Cook Time; %MW Power Level (0-100% in 10% increments); and Add a Stage.
- Press number keypads to enter desired settings per field.
- To add additional cooking stages:** Press DOWN (▼) keypad until "+ STAGE" is highlighted. Repeat steps 4-6.
- Press START/OK keypad to begin cooking.
- At the end of the cooking cycle, the oven beeps. Oven interior and cooking dish will be hot. Carefully remove food from oven.

### Edit Recipe Mode


- Press MENU (≡) keypad. MENU screen will display.\*
- Press number "2" keypad to access "Edit Recipe".
- To navigate to editable fields:** Press UP/DOWN (▲▼) keypads. Active field will be highlighted in red. Editable fields include: Recipe Name; Oven Temperature; Cook Time; %MW Power Level (0-100% in 10% increments); and Add a Stage.
- Press number keypads to enter desired settings per field.
- To add additional cooking stages:** Press DOWN (▼) keypad until "+ STAGE" is highlighted. Repeat steps 3-5.
- To save and exit:** Press START/OK keypad.
- To discard changes:** Press STOP/RESET keypad.

# Quick Start Guide

Refer to Owner's Manual for Safety Statements. Complete Owner's Manual available online.

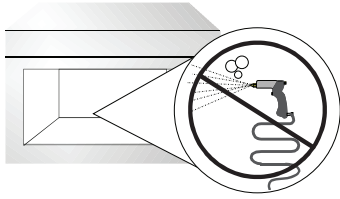

**DO NOT** power spray

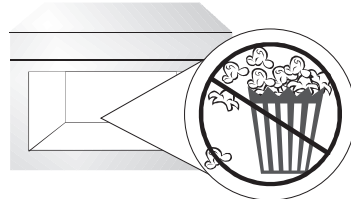

**No** popcorn

## Access and Modify User Options

There are several options you can change to customize the operation of the oven. Options are shown below. **The factory setting is shown in bold type.**

1. Press MENU (≡) keypad.  
**Note:** If PIN Code is enabled, your unique 4 digit pin code will be required.
2. Press number "5" keypad to access "User Options".
3. To scroll between pages of settings: Press UP/DOWN (▲▼) keypads.
4. To access available options for a setting: Press corresponding number keypad.
5. To change a setting: Press corresponding number keypad.
6. **To save changes:** START/OK keypad.
7. **To exit:** Press STOP/RESET keypad.

## STANDARD DEFAULT PER MODEL (FACTORY SETTINGS IN BOLD)

Factory setting may vary by model

SETTING	DISPLAYED OPTIONS	DESCRIPTION
End of Cycle Beep	<b>3 Seconds</b> Continuous Burst	<b>3 second continuous beep</b> Continuous beep until door is opened 5 beep bursts until door is open
Speaker Volume	Off Low <b>Medium</b> High	Sets volume to off Sets volume to low <b>Sets volume to medium</b> Sets volume to high
Key Beep	Off <b>On</b>	Prevents beep when keypad is pressed <b>Allows beep when keypad is pressed</b>
Reset on Door Open	End Cook Cycle <b>Pause Cook Cycle</b>	Cancels heating time count down after door is opened during cycle. <b>Allows oven to resume heating time countdown after door is opened during cycle</b>
Digit Entry	<b>Single Digit</b> Double Digit Folders	<b>Allows 10 (0-9) preprogrammed recipes</b> Allows 100 (00-99) preprogrammed recipes Allows 10 folders (0-9), each with 10 preprogrammed recipes
Maximum Cook Time	10 minutes <b>20 minutes</b>	Allows 10 minutes of heating time <b>Allows 20 minutes of heating time</b>
Keypad Enable Window	15 seconds 30 seconds <b>1 minute</b> 2 minutes	15 seconds after oven door is opened, keyboard disabled 30 seconds after oven door is opened, keyboard disabled <b>1 minute after oven door is opened, keyboard disabled</b> 2 minutes after oven door is opened, keyboard disabled
On-the-Fly Programming	Off <b>On</b>	Disables pushing any additional keypads during a cook cycle <b>Allows pushing additional keypads to add or change time in the middle of a cook cycle</b>
Clean Filter Reminder	Off <b>Every 7 Days</b> Every 30 Days Every 90 Days	Oven will not display "Clean Filter Message" <b>Oven will display "Clean Filter Message" every 7 days</b> Oven will display "Clean Filter Message" every 30 days Oven will display "Clean Filter Message" every 90 days
Preheat Warning	Enabled <b>Disabled</b>	Oven will display warning message if recipe temperature does not match oven temperature <b>Oven will not display temperature warning message</b>
Auto Shut-Off	Never <b>2 Hours</b> 4 Hours 8 Hours	Oven will not automatically shut-off <b>After 2 hours of inactivity, oven will automatically shut-off</b> After 4 hours of inactivity, oven will automatically shut-off After 8 hours of inactivity, oven will automatically shut-off
PIN Code	<b>Off</b> On Set PIN Code	<b>PIN Code not required to access Menu or User Options</b> PIN Code required to access Menu and User Options PIN Code required. Create new 4 digit PIN Code
Language	Chinese (Mandarin), Danish, Dutch, <b>English</b> , Filipino, French, German, Greek, Italian, Japanese, Korean, Norwegian, Polish, Portuguese, Romanian, Russian, Spanish, Swedish, Ukrainian, Vietnamese	
Temperature Unit	Fahrenheit Celsius	Temperatures are displayed in Fahrenheit for 60Hz models Temperatures are displayed in Celsius for 50Hz models
Quantity Prompt**	On <b>Off</b>	Prompts the user for portion quantity multiplier (1-9) upon selecting a preset program <b>Allows user to cook individual portions</b>

\*\* Available on select models only. (Only displayed in User Options menu if factory option is enabled)

## Oven Cleaning Basics

Refer to Owner's Manual for complete instructions and recommendations (available online)

**DO** wear protective gloves and glasses

**DO** always use recommended cleaning supplies: *Damp towel, plastic scouring pad, ACP Oven Cleaner and ACP Oven Shield Protectant*

**DO** allow oven and tools to cool before cleaning

**DO NOT** use abrasive cleaners or cleaners containing ammonia, citrus, phosphates, chlorine, sodium or potassium hydroxide (lye).

**Use of unapproved cleaning agents will void the terms of the warranty.**

**DO NOT** use water pressure style cleaning systems

**DO NOT** spray cleaning solution into perforations.

**DO NOT** use knife, metal utensil, or steel wool pad to remove baked-on material.