


Unit Information


120V – 60Hz – 1700W
1.5 Cubic Foot Capacity
Will Accommodate 4 Half Size Sheet Pan.

WARING COMMERCIAL®


WCO500X Half Size Convection Oven

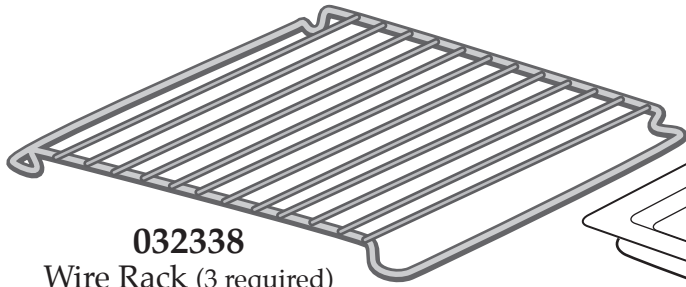


032338
Wire Rack (3 required)

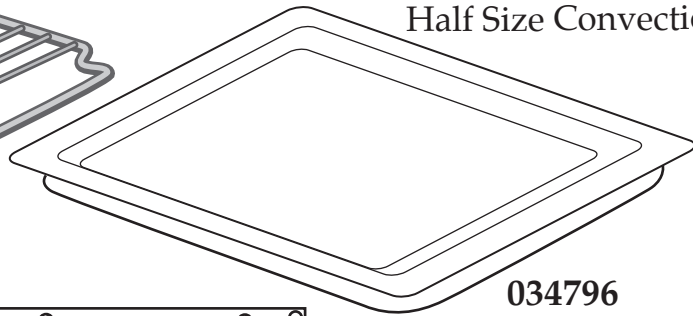

034796
Baking Tray

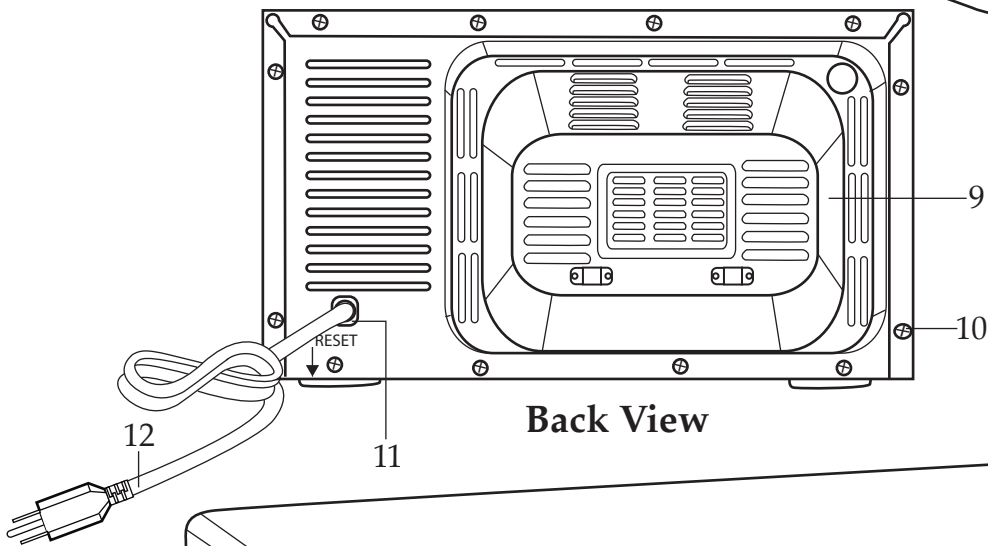

Back View

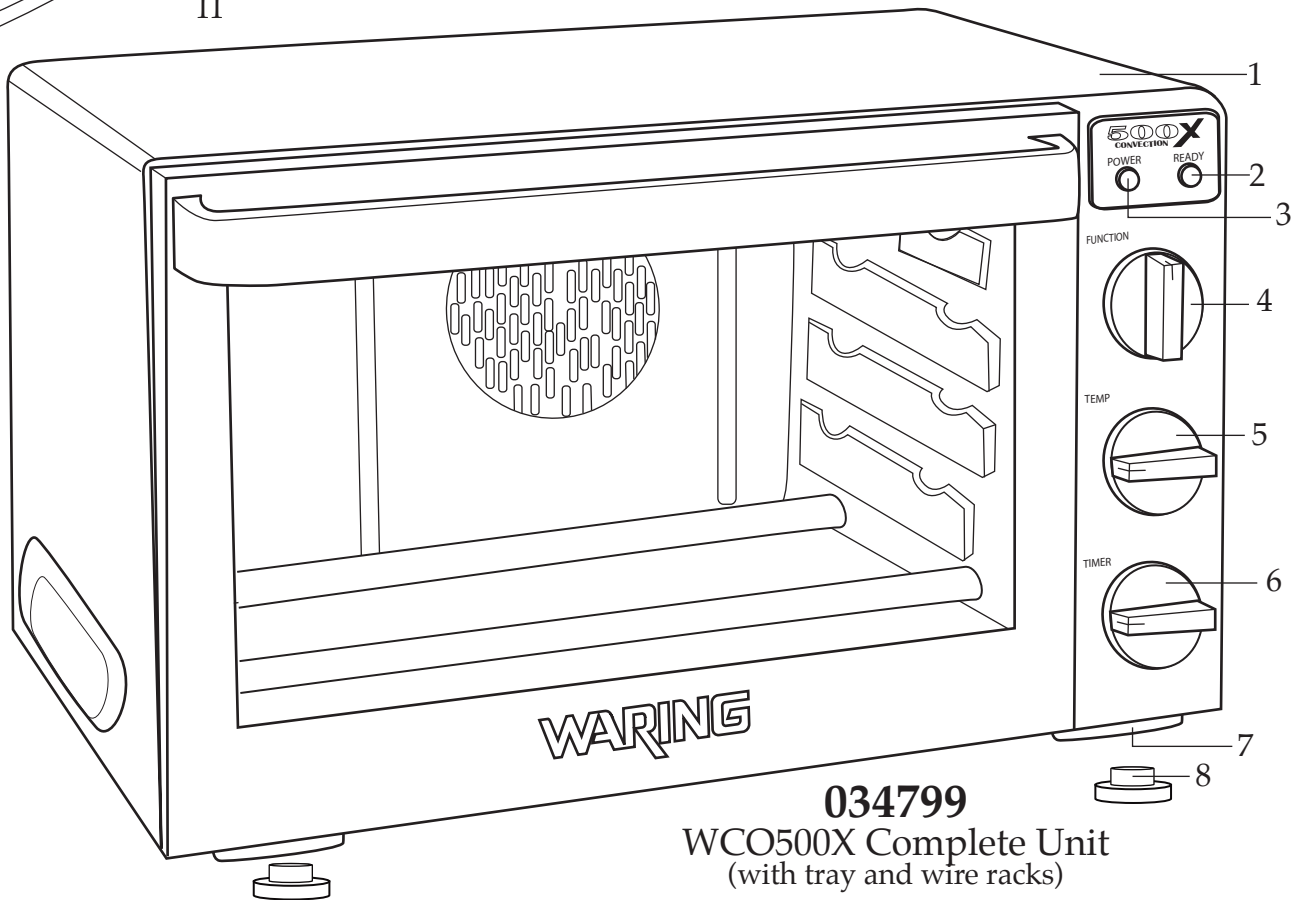

034799
WCO500X Complete Unit
(with tray and wire racks)

WARING COMMERCIAL

WCO500X Half Size Convection Oven

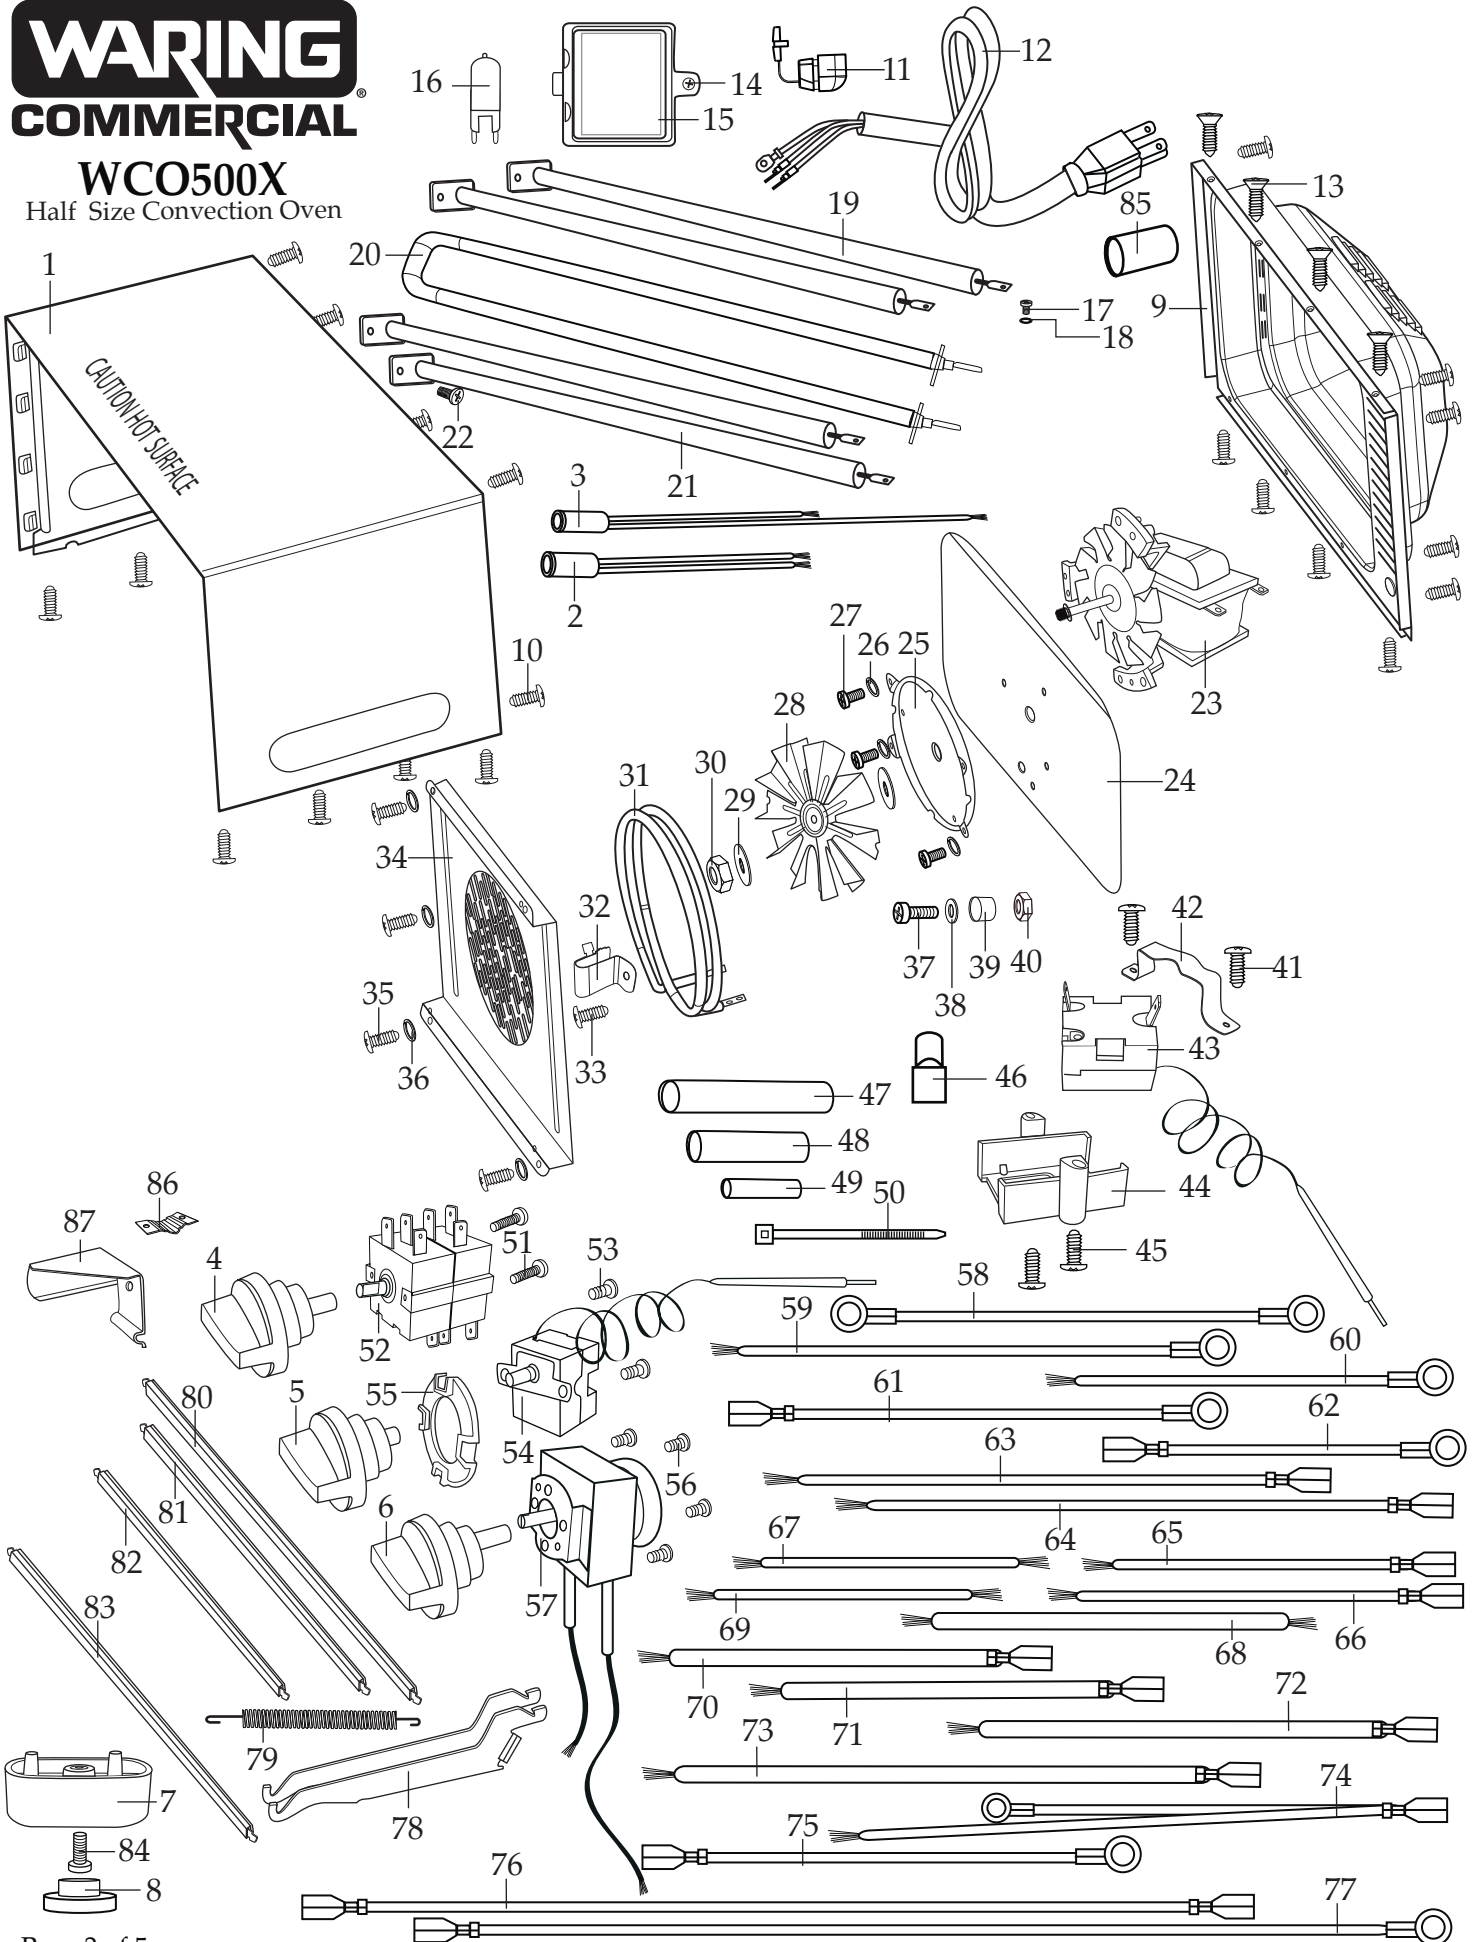


Illustration #	Part #	Description
1	034795	Shell
2	034766	Ready Light (green)
3	034765	Power Light (red)
4	034687	Function Knob
5	034688	Temp Knob
6	034689	Timer Knob
7	034690	Foot Base (4 required)
8	034691	Foot (4 required)
9	034794	Back Cover
10	034693	Screw (16 required)
11	034694	Strain Relief
12	034695	Cord
13	034704	Flat Head Screw (4 required)
14	034696	Light Cover Screw
15	034798	Light Cover
16	034698	Halogen Bulb
17	034699	Screw (leads to elements)
18	034700	Spring Washer (leads to elements)
19	032942	Top Element (2 required <i>have pink ends</i>)
20	032944	U Element
21	032943	Bottom Element (2 required <i>have white ends</i>)
22	034703	Screw (element plate)
23	034706	Motor Assembly
24	034707	Insulated Heat Plate
25	034708	Motor Fan Base
26	034717	Spring Washer (3 required)
27	034705	Screw (3 required)
28	034709	Fan
29	034710	Washer (2 required)
30	034711	Hex Nut
31	034781	Rear Heating Element

Illustration #	Part #	Description
32	034763	Rear Heating Element Bracket (2 required)
33	034693	Screw
34	034797	Motor Fan Screen
35	034714	Screw (4 required)
36	034715	Spring Washer (4 required)
37	034716	Screw
38	024717	Spring Washer
39	034718	Collar
40	034719	Hex Nut
41	034721	ScREW (2 required)
42	034720	Reset Switch Bracket
43	034722	Reset Switch
44	034723	Reset Switch Holder
45	034724	Screw
46	019123	Crimp Conntectors (6 required)
47	034725	Large Rubber Sleeve (.375" diameter x 2" length)
48	034726	Medium Rubber Sleeve (.375" diameter x 1.5" length)
49	034727	Small Rubber Sleeve (.25" diameter x 1.25" length)
50	013731	Wire Tie (5 required)
51	034728	Function Switch Screw (2 required)
52	034729	Function Switch
53	034730	Thermostat Screw (2 required)
54	034792	Thermostat
55	034732	Thermostat Gasket
56	034733	Timer Screw (4 required)
57	032941	Timer with Leads
58	034734	9.25" White Lead (2 required)
59	034789	13.5" White Lead (2 required)
60	034736	5.25" White Lead
61	034783	15" Brown Lead

Illustration #	Part #	Description
62	034791	7.25" Black Lead
63	034739	5.75" White Lead
64	034739	5.75" White Lead
65	034784	7" Brown Lead
66	034741	8.75" White Lead
67	034742	4.5" White Lead
68	034743	4.5" Black Lead
69	034744	4.5" Thick White Lead
70	034745	5" Thick White Lead
71	034746	5" Thick Black Lead
72	034790	7" Thick Black Lead
73	034748	8.5" Thick White Lead
74	034788	Double White Lead
75	034786	8" Blue Lead
76	034787	29.5" Black Lead
77	034785	36" Red Lead
78	034752	Hinges (set)
79	034782	Hinge Spring (2 required)
80	034778	20.25" Door Gasket (top oven compartment)
81	034780	13" Door Gasket (left side oven compartment)
82	034779	9.5" Door Gasket (knob side oven compartment)
83	034777	18.5" Door Gasket (oven door)
84	034759	Foot Screw (4 required)
85	034760	Ventilation Pipe
86	034762	Small Thermostat Bulb Bracket (2 required)
87	034793	Large Thermostat Bulb Bracket

Oven Settings	Interior Light	Bottom Elements	Top Elements	Top U Element	Rear Element	Blower
OFF	OFF	OFF	OFF	OFF	OFF	OFF
Convection Bake	ON	OFF	OFF	OFF	ON	ON
Bake	ON	ON	ON	OFF	OFF	OFF
Roast	ON	ON	ON	OFF	OFF	ON
Broil	ON	OFF	ON	ON	OFF	OFF