

robot coupe®



R 2 N Ultra



R 2 N



R 2 N CLR

Robot Coupe U.S.A., Inc.,

264 South Perkins, Ridgeland, MS 39157 - Phone : 800/824-1646 • 601/898-8411 • Fax: 601/898-9134
email: info@robotcoupeusa.com - website: www.robotcoupeusa.com



www.robotcoupeusa.com

The screenshot shows the website's navigation bar with the logo, a 'CALL US NOW!' button with the number 1-800-824-1646, and language options: 'The company | Log in | English - USA | Español-USA | Français - QUEBEC | More...'. The main menu includes 'CATALOG', 'SELECTION GUIDE', 'PRODUCT INFO', 'VIDEOS', 'OUR RECIPES', 'CONTACT US', 'SALES REF', and 'SUPPORT'. A search bar is located to the right of the menu. Below the navigation, the page title is 'Service Agencies'. To the right of the title are two buttons: 'Access to Part Diagrams' and 'Register your product'. The main content area features a map of the United States with many location pins. The map is credited to Google and INEGI. At the bottom of the page, there is a footer with the robotcoupe logo, a copyright notice '© All rights reserved, 2010.', and a list of navigation links: 'HOME | CATALOG | SELECTION GUIDE | PRODUCT INFO | VIDEOS | OUR RECIPES | SUPPORT | SITEMAP'. There is also a 'Log on | Other languages' link.

Register your product online

We reserve the right to alter at any time without notice the technical specifications of this appliance.
None of the information contained in this document is of a contractual nature. Modifications may be made at any time.
© All rights reserved for all countries by: ROBOT-COUBE S.N.C.

SUMMARY

WARRANTY

IMPORTANT WARNING

INTRODUCTION TO YOUR NEW R 2 N • R 2 N Ultra • R 2 N CLR BOWL CUTTER/VEGETABLE PREPARATION

SWITCHING ON THE MACHINE

- Advice on electrical connections
- Control panel

ASSEMBLY

- Bowl attachment
- Vegetable preparation attachment

OPERATING INSTRUCTIONS

- Bowl attachment
- Vegetable preparation attachment

CLEANING

- Motor base
- Attachments

MAINTENANCE

- Motor seal
- Blade
- Blades and plates
- Bowl locking washer

SAFETY

TECHNICAL DATA

- Exploded views
- Electrical and wiring diagrams

ROBOT COUPE U.S.A., INC. LIMITED WARRANTY

YOUR NEW ROBOT COUPE PRODUCT IS WARRANTED TO THE ORIGINAL PURCHASER FOR A PERIOD OF ONE YEAR FROM THE DATE OF PURCHASE.

This LIMITED WARRANTY is against defects in the material and/or workmanship, and includes labor for replacement of defective parts, provided repairs are performed by an authorized service agency (see attached list).

The Customer must inform the Service Agency of the possibility of warranty coverage and provide a copy of the dated sales or delivery receipt BEFORE WARRANTY REPAIRS ARE BEGUN.

Replacement parts and accessories are warranted for ninety (90) days from the date of purchase when purchased separately and will be verified by dated sales receipt OR packing slip which lists that item.

All parts or accessories replaced under warranty must be returned to the Service Agency.

THE FOLLOWING ARE NOT COVERED BY THE ROBOT COUPE U.S.A., Inc. LIMITED WARRANTY:

- 1** - Damage caused by abuse, misuse, dropping, or other similar damage caused by or resulting from failure to follow assembly, operating, cleaning, user maintenance or storage instructions.
- 2** - Labor to sharpen and/or replacements for blades that have become blunt, chipped or worn after a normal or excessive period of use.
- 3** - Materials or labor to replace or repair scratched, stained, chipped, pitted, dented or discolored surfaces, blades, knives, attachments or accessories.
- 4** - Any alteration, addition, or repair that has not been carried out by the company or an approved service agency.
- 5** - Transportation of the appliance to or from an approved service agency.
- 6** - Labor charges to install or test new attachments or accessories (i.e., bowls, plates, blades, attachments), which have been replaced for any reason.

7 - The cost of changing direction-of-rotation of three-phase electric motors (Installer is responsible).

8 - SHIPPING DAMAGES. Visible and/or hidden damage is the responsibility of the freight carrier. The consignee must inform the carrier and consignor immediately, or upon discovery in the case of hidden defects.

KEEP ALL ORIGINAL CONTAINERS AND PACKING MATERIALS FOR CARRIER INSPECTION.

Neither ROBOT COUPE U.S.A., Inc. nor its affiliated companies or any of its distributors, directors, agents, employees, or insurers will be liable for indirect damage, losses, or expenses linked to the appliance or the inability to use it.

The ROBOT COUPE U.S.A., Inc. warranty is given expressly and in lieu of all other warranties, expressed or implied, for merchantability and for fitness toward a particular purpose and constitutes the only warranty made by ROBOT COUPE U.S.A., Inc.

IMPORTANT WARNING



WARNING

KEEP THESE INSTRUCTIONS IN A SAFE PLACE

WARNING: In order to limit accidents such as electric shocks, personal injury or fire, and in order to limit material damage due to misuse of the appliance, please read these instructions carefully and follow them strictly. Reading the operating instructions will help you get to know your appliance and enable you to use the equipment correctly. The operation manual should be kept within easy access to all users for reference and should be read completely by all first time users of the machine. Our equipment is designed for professional use and must not be used by children under any circumstances.

UNPACKING

- Carefully remove the equipment from the packaging and take out all the boxes or packets containing attachments or specific items.
- **WARNING**-some of the parts are very sharp e. g. blades, plates ... etc.

INSTALLATION

- We recommend that you install your machine on a stable solid base at a comfortable working height.

CONNECTION

- Always check that your power supply corresponds to that indicated on the serial number plate and that it is properly sized.

HANDLING

- Always wear cut-resistant gloves when handling the cutting plates or the cutter blade.

ASSEMBLY PROCEDURES

- Follow the various assembly procedures carefully (see page 6) and make sure that all the attachments are correctly positioned.

USE

- Do not open the feed lead / attachment until the motor has come to a complete stop.
- Never tamper with, or defeat the purpose of the locking and safety systems.
- Do not put nonfood objects in the bowl or vegetable prep openings.
- Always use the food pushers to push the product into the vegetable preparation attachment openings.
- Do not leave the machine running unattended.

CLEANING

- Always unplug your machine before cleaning.
- Always clean the machine and attachments at the end of each use.
- Never place the motor unit in water.

- For parts made of aluminum alloys, use cleaning detergents suitable for aluminum.
- For plastic parts, do not use detergents that are too alkaline (i.e., containing too much caustic soda or ammonia...).

Robot Coupe can in no way be held responsible for the user's failure to follow the basic rules of cleaning and maintenance.

MAINTENANCE

- Always unplug the appliance before servicing.
- Check the seals regularly and ensure that the safety devices are in good working order.
- It is particularly important to maintain and check the attachments since certain products contain corrosive agents e.g. citric acid.
- **NOTICE:** Never operate the appliance if the power cord or plug has been damaged.
- If the machine fails to operate as described in this manual, or if the machine malfunctions in any way, remove the machine from use and have it serviced. Additionally, discard all food processed at the time of the malfunction.
- Contact your local **ROBOT-COUBE** Authorized Service Agency if something appears to be wrong.

INTRODUCTION TO YOUR NEW R 2 N • R 2 N Ultra • R 2 N CLR

The R 2 N / R 2 N Ultra / R 2 N CLR is a versatile machine designed to meet your professional needs. It can perform a number of tasks, as well as save much in time and labor.

This food processor consists of a bowl assembly and a vegetable preparation attachment. The 3 quart bowl is used for chopping, grinding, pureeing, blending, mixing, and kneading ingredients used in most recipes.

A wide range of cutting plates are available for use with the vegetable preparation attachment. Cutting plates are available for slicing, waved slicing, grating, pulping and julienne.

Its numerous functions will open the door to a whole new culinary world.

Thanks to its simple design, all components requiring frequent handling for maintenance or cleaning can be easily assembled or removed.

All users should read this operation manual before operating the machine.

SWITCHING ON THE MACHINE

• ADVICE ON ELECTRICAL CONNECTIONS

Before plugging in, check that your power supply corresponds to that indicated on the machine's serial number plate.



WARNING

This appliance must be plugged into a grounded socket (risk of electrocution).

• CONTROL PANEL


R 2 N / R 2 N Ultra / R 2 N CLR

| | | |
|------------|---|---------------|
| Red knob | = | Off switch |
| Green knob | = | On switch |
| Black knob | = | Pulse control |

ASSEMBLY

• BOWL ATTACHMENT

1) With the motor base facing you, place the bowl onto the motor base with the handle toward the front. Turn the bowl just off-center and to the left as you lower it onto the base.

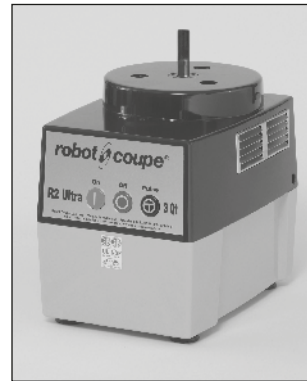

2) Then, turn it back to the right, (counterclockwise) locking it onto the motor base tabs.

3) Place the blade onto the motor shaft. Rotate the blade until it drops into place. The bottom blade should be level with and just off the bottom of the bowl.




4) Note the plastic tab on the bowl lid. Place the lid on the bowl with the tab turned to the front and slightly to the left of the bowl handle; then, turn the lid back to the right until it comes to a stop with the tab over the bowl handle.


The device is now ready for use.

• VEGETABLE PREPARATION ATTACHMENT

The vegetable preparation attachment consists of two main detachable parts: the continuous feed attachment and the continuous feed lead.

1) With the motor base facing you, fit the continuous feed attachment onto the motor base; the exit chute should be at the rear of the machine.

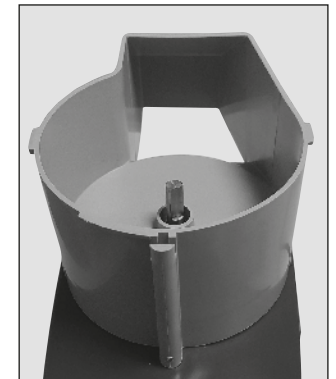

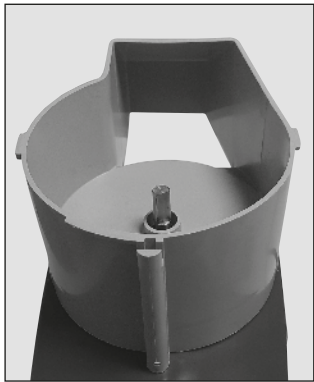

2) Turn the attachment to the right until it locks onto the motor base tabs.

3) Place the discharge plate onto the motor shaft. It should fall into place just off the bottom of the continuous feed attachment.



USING A REGULAR PLATE :



4) Place the cutting plate of your choice onto the discharge plate. It may be necessary to rotate the plate until it drops fully onto the discharge plate.

Follow step 5.



5) Place the continuous feed lead onto the continuous feed attachment, and rotate it back to the right until it locks onto the bowl tabs.

OPERATING INSTRUCTIONS

THE UNIT SHOULD BE OFF EXCEPT WHEN PROCESSING IS UNDERWAY

It is recommended that the machine be operated on a 50 % duty cycle. This is easily accomplished since the preparation time (cleaning, coring, peeling, and loading) takes longer than the processing time. This will yield the longest life for your machine.

• BOWL ATTACHMENT

The cutter bowl is used for grinding, kneading, pureeing, blending, mixing, and emulsifying. Before placing the product into the bowl, some products such as meats and cheeses should be precut into 1-2 inch portions. When filling the bowl, allow space above the product for circulation.

There are two ways to run your machine: chopping, using a quick start/stop action with the **Pulse** button or running continuously for a fine chop or puree. To obtain a uniform chop of products such as meats and cheeses, begin with a uniformly portioned product.

Pulse the machine until the desired result is reached. Then, if a puree or fine chop is desired, press the **On** button, and allow the machine to run until the product has the right consistency.

| USES | Max. processing quantity (in pounds) | Processing time (in mn) |
|--|--------------------------------------|-------------------------|
| CHOP | | |
| • MEAT | | |
| Hamburgers / steak tartare | 2 | 3 |
| Sausage meat / tomatoes | 2 | 3 |
| Terrine / pâté | 2 | 4 |
| • FISH | | |
| Brandade | 2 | 5 |
| Terrines | 2 | 5 |
| • VEGETABLES | | |
| Garlic / parsley / onion / shallots | ¾ | 3 |
| Soup / purées | 2 | 4 |
| • FRUIT | | |
| Compotes / purées | 2 | 4 |
| EMULSIFY | | |
| Mayonnaise / Ailloli / remoulade sauce | 2 ¼ | 3 |
| Hollandaise / Béarnaise | 2 ¼ | 5 |
| Snail or salmon butter | 2 ¼ | 4 |
| KNEAD | | |
| Shortcrust pastry / shortbread | 2 | 4 |
| Flaky pastry | 2 | 4 |
| Pizza dough | 2 | 4 |
| GRIND | | |
| Dried fruit | 1 | 4 |
| Ice | 1 | 4 |
| Breadcrumbs | 1 | 4 |

• VEGETABLE PREPARATION ATTACHMENT

The vegetable preparation attachment is used for slicing, grating, waved slicing, julienne and pulping.

The vegetable preparation attachment consists of two feed openings :

- **one large feed** opening for cutting vegetables such as cabbage, celeriac, etc.
- **a cylindrical feed** opening inside the large pusher for long or hard vegetables and high-precision cutting.

For optimum cutting, use this section as a guide.

Do not attempt to run frozen products through the cutting plates.

Do not put anything other than food products into the feed openings.

Do not remove attachments while the motor is running.





Do not apply excess pressure to the food pushers: This can cause damage to the motor and other parts.

HOW TO USE THE LARGE FEED OPENING

Fill the hopper with the foodstuff. Apply the pusher on the food with a constant and moderate pressure. Press the **On** button to start the motor. To get the best quality cut, maintain a moderate pressure on the pusher until the full hopper is processed.

HOW TO USE THE CYLINDRICAL SMALL OPENING

Remove the small pusher from the large pusher. Fill the small opening with the foodstuff and follow the same procedure as above.

| SLICERS | |  |
|-------------------|---|---|
| 3/64" | carrot / cabbage / cucumber / onion / potato / leek | |
| 5/64" / 1/8" | lemon / carrot / mushroom / cabbage / potato / cucumber / zucchini / onion / leek / bell pepper | |
| 5/32" / 3/16" | eggplant / beet root / carrot / mushroom / cucumber / bell pepper / radish / lettuce / potato / leek / tomato | |
| 1/4" | eggplant / beetroot / carrot / mushroom / cucumber / bell pepper / radish / lettuce / potato / leek | |
| RIPPLE CUT SLICER | |  |
| 5/64" | beetroot / potato | |
| GRATERS | |  |
| 1/16" | celeriac / cheese | 9/32" cabbage/cheese |
| 5/64" | carrot / celeriac / cheese | Hard cheese |
| 1/8" | carrot | 1/32" Extra fine 0.7mm |
| 1/4" | cabbage/cheese | 3/64" Pulping 1 mm |
| JULIENNE | |  |
| 5/64"x 5/64" | carrot / celeriac / potato | |
| 5/64"x 5/32" | carrot / beetroot / zucchini / potato | |
| 5/64"x 1/4" | carrot / beetroot / zucchini / potato | |
| 5/32"x 5/32" | eggplant / beetroot / zucchini / potato | |
| 1/4"x 1/4" | eggplant / beetroot / celeriac / zucchini / potato | |
| 5/16"x 5/16" | celeriac / potato | |

CLEANING



WARNING

As a precaution, always unplug your appliance before cleaning it (risk of electric shock).

• MOTOR BASE


Never immerse the motor base in water. Clean using a damp cloth or sponge.

Cleaning of the motor base assembly must be done with care.

First unplug the unit. A sponging with a cloth lightly dampened (not dripping) in a mild detergent is acceptable, making sure the water is not permitted to penetrate the shaft seal or around the switches and in the ventilation openings. Clean around the shaft seal with a small brush, taking care to remove all food. Do not forget to clean the motor shaft. Rinse the motor base first using a cloth lightly dampened (not dripping) with water, then with a sanitizing solution. Dry the machine with a soft cloth removing all liquids from seal areas.

• ATTACHMENTS :

CLEANING THE BLADE ASSEMBLY

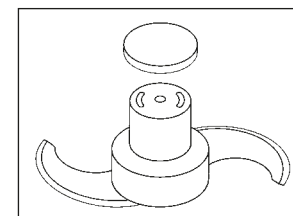

There is a removable cap attached to the top of the S-blade assembly. This cap should be removed before cleaning the blade assembly.

Caution: The blades are sharp. Wear cut-resistant gloves when handling the blade.

The blade cap may be removed by carefully pulling the cap up away from the blade. It may be helpful to pull slightly to the side. The cap is held in place by small plastic clips that snap into the body of the blade assembly. If the cap is difficult to remove, you can use a small diameter rod or screwdriver inserted through the bottom side of the blade assembly to knock out the cap using a quick sharp impact. Again, use caution when handling the blade.

Autoclave:

The blade assembly will withstand cleaning in an autoclave system with temperatures less than 210 degrees C. However, it will reduce the life of the blade as compared to the following cleaning instructions.

Remove all attachments before cleaning. The bowl and continuous feed assemblies should be cleaned per the following instructions or as required by local health department regulations.

The bowl, blade, lid, continuous feed bowl, continuous feed lead, pushers, and plates are dishwasher safe. All of the attachments listed above can be washed in a dish machine or three-tank system pot sink. Pre-rinse the attachments before washing to remove any bulk food on the parts. A stiff bristle brush or power sprayer faucet attachment is effective in knocking the food out of the crevices as a pre-rinse procedure. The washer should have an industry standard wash, rinse, and sanitization cycle. Allow the parts to air dry after sanitizing and before reassembly.

NOTE : The high temperatures of dish machines will tend to shorten the life of the plastic and rubber parts. Hand washing using a three-pot sink will provide for the longest life of these parts.

Wear cut-resistant gloves when cleaning the blade and plates.

Inspect the area on the outside of the bowl around the handle and the outside of the continuous feed bowl around the interlock pin to ensure they are clean. Use a brush on these areas if necessary.



IMPORTANT

Check that your detergent is suitable for cleaning plastic parts. Some washing agents are too alkaline (e.g. high levels of caustic soda or ammonia) and totally incompatible with certain types of plastic, causing them to deteriorate rapidly.

MAINTENANCE


• MOTOR SEAL

An examination should be made periodically to ensure that a seal against liquids is being maintained around the motor shaft. The seal can and should be replaced whenever wear or erosion is noted or minimally once every three to six months. It is recommended that the seal be replaced by an authorized repair agency.

• BLADE

Blades should be kept sharp. It is not necessary to have a razor edge. However, they will need sharpening periodically. Replacement of the dull blades or plates is recommended.

SHARPENING THE BLADE

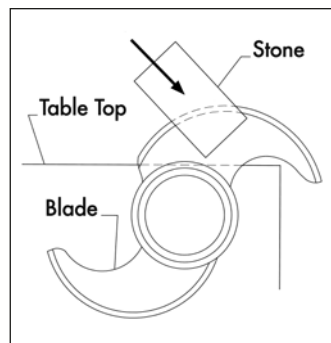

The blade will require sharpening on a periodic basis depending on use. The use of a dull blade will sometimes give unsatisfactory results. Follow the directions shown to sharpen the blade, or have the blades sharpened professionally if you prefer.

- Put on your cut-resistant gloves

- Use a Robot Coupe stone or any good sharpening stone.
- Hold or clamp the blade flat on the edge or corner of a sturdy table.
- With the other hand, hold the stone at a 30 degree angle against the top bevel of one blade.
- Pull the stone into the blade edge moving from hub to tip, several strokes, until the blade is sharp.

- Turn the blade over, and rub the stone flat against the underside of the blade to remove the feather edge formed at step 5.
- Repeat the procedure for the other blade.
- Wash the blade before use.

• BLADES AND PLATES

The blades on the slicing and julienne plates are all subject to wear and should be changed as required to ensure high quality cutting.

• BOWL LOCKING WASHER

The bowl locking washer is located below the bowl and holds the bowl in place. If it becomes worn, it needs to be replaced.

SAFETY

The R 2 N / R 2 N Ultra / R 2 N CLR are fitted with an interlock system.

When you open the bowl lid, the motor stops.

When you open the continuous feed lead, the motor stops.



WARNING

The blades and cutting plates are extremely sharp. Handle with care.

To avoid splashing when running liquids in the bowl, allow the blades to come to a complete stop before opening the lid.

NOTE : The machines are equipped with a thermal protector which automatically stops the motor if the machine is overloaded. If this happens, press the **Off** button and allow the machine to cool completely before restarting.



REMEMBER

Never try to override or defeat the purpose of, the locking and safety systems.

Never put nonfood objects into the machine openings.

Only use the food pushers to force the food into the machine.

Do not overload the appliance.

Never leave the machine running unattended.

SERVICE

See warranty first then;

Should your unit require service, check with your distributor to see where local service is available. If not or if you wish your unit to be serviced at the factory, call for return instructions and ship the unit prepaid to our factory address.

PH : 800/824-1646

Robot Coupe U.S.A., Inc.,

Service Department Repair

264 South Perkins Street


Ridgeland, MS 39157

For service in Canada contact the Robot-Coupe
USA factory for repair instructions.

robotcoupe® U.S.A., Inc.

R 2 N
Serial number 246xxxxx xx

1-Speed, 120 Volt, 1 Phase
60Hz, 1 HP, 1725 RPM, 7 Amps

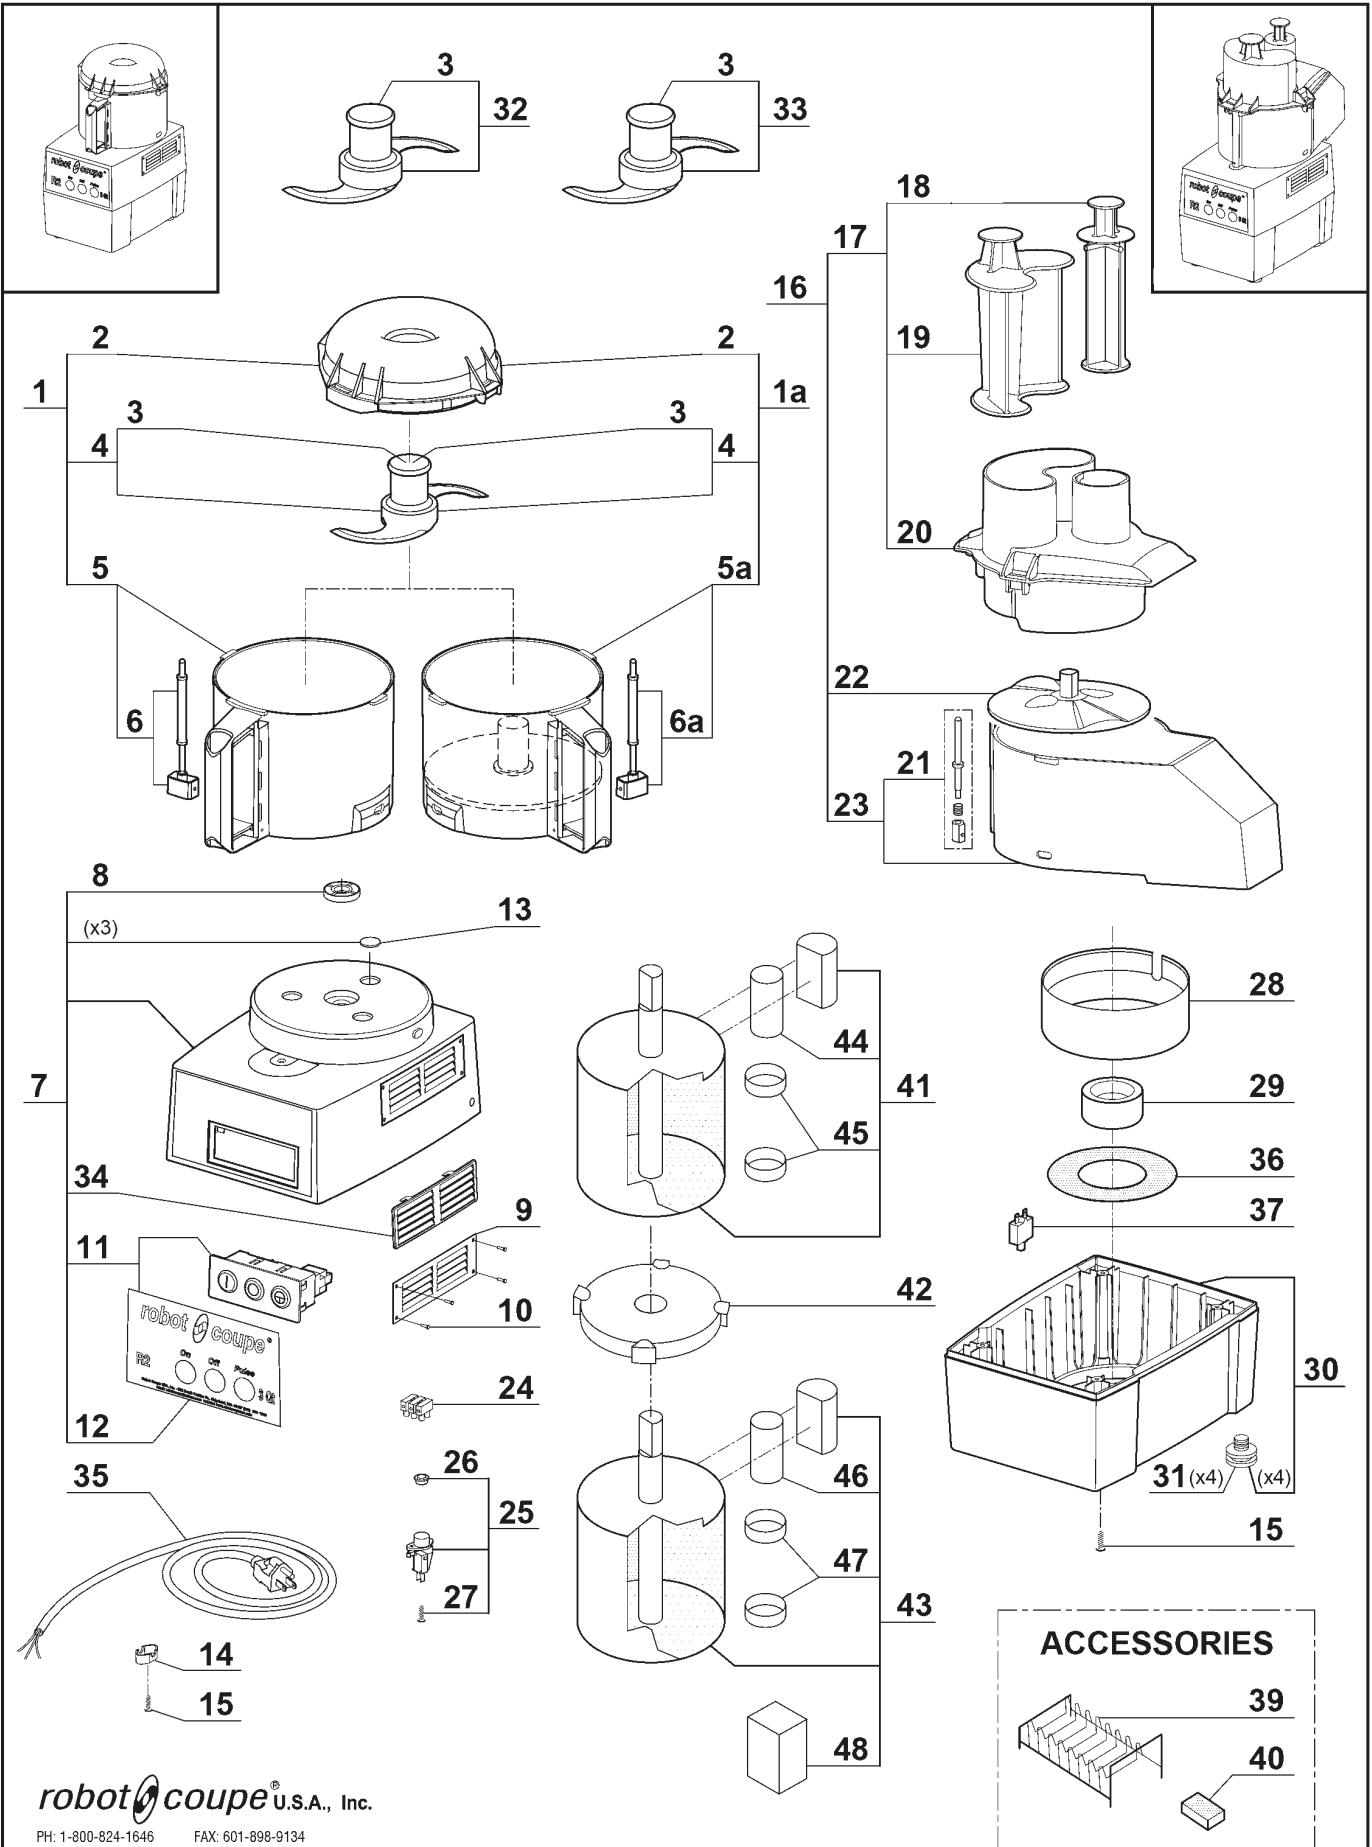

robotcoupe® U.S.A., Inc.


PH: 1-800-824-1646 FAX: 601-898-9134
email: info@robotcoupeusa.com

| Index | Pièce / Part | Description | Désignation |
|-------|----------------|-------------------------------------|---|
| 1 | 27 239 | GREY CUTTER ASSEMBLY | ACCESSOIRE CUTTER GRIS |
| 1a | 27 240 | CLEAR CUTTER ASSEMBLY | ACCESSOIRE CUTTER CRISTAL |
| 2 | 105 236 | CUTTER LID | COUVERCLE CUTTER |
| 3 | 117 058 | BLADE CAP | CAPUCHON COUTEAU |
| 4 | 27 055 | SMOOTH BLADE | COUTEAU LISSE |
| 5 | 112 204 | GREY CUTTER BOWL | CUVE CUTTER GRISE |
| 5a | 112 203 | CLEAR CUTTER BOWL | CUVE CUTTER CRISTAL |
| 6 | 39 103 | GREY COMPLETE SAFETY ROD | ENSEMBLE TIGE SECURITE GRISE |
| 6a | 39 077 | CLEAR COMPLETE SAFETY ROD | ENSEMBLE TIGE SECURITE CRISTAL |
| 7 | 39 108 | MOTOR SUPPORT ASSEMBLY | ENSEMBLE SUPPORT MOTEUR |
| 8 | 501 010 | SHAFT SEAL | BAGUE D'ETANCHEITE |
| 9 | 101 098 | OLD VENT COVER | ANCIENNE GRILLE DE VENTILATION |
| 10 | 200 015 | RIVET | RIVET |
| 11 | 39 106 | CONTROLE PANEL ASSEMBLY | ENSEMBLE TABLEAU DE COMMANDE |
| 12 | 407 669 | FRONT PLATE | PLAQUE FRONTALE |
| 13 | 101 103 | BOLT COVER | CAPSULE CACHE VIS |
| 14 | 101 106 | POWER CORD CLIP | CAVALIER SERRE CABLE |
| 15 | 200 005 | SCREW 3,5 x 19 | VIS 3,5 x 19 |
| 16 | 27 242 | VEGETABLE SLICER ATTACHMENT | ACCESSOIRE COUPE-LEGUMES |
| 17 | 39 104 | LID + PUSHERS ASSEMBLY | ENSEMBLE COUVERCLE + POUSSOIRS |
| 18 | 103 281 | ROUND PUSHER | POUSSOIR CAROTTES |
| 19 | 103 280 | VEGETABLE PUSHER | POUSSOIR LEGUMES |
| 20 | 118 592 | VEGETABLE SLICER FEED LEAD ASSEMBLY | ENSEMBLE COUVERCLE COUPE-LEGUMES |
| 21 | 29 858 | COMPLETE SAFETY ROD | ENSEMBLE TIGE SECURITE |
| 22 | 103 288 | SLINGER PLATE | DISQUE EVACUATEUR |
| 23 | 102 699 | VEGETABLE SLICER BOWL | CUVE COUPE-LEGUMES |
| 24 | 19 190 | TERMINAL BLOCK | ENSEMBLE DOMINO |
| 25 | 29 919 | MICROSWITCH ASSEMBLY | ENSEMBLE MINIRUPTEUR |
| 26 | 500 527 | SEAL RING | CAPSULE D'ETANCHEITE |
| 27 | 200 004 | SCREW 3,5 x 15,9 | VIS 3,5 x 15,9 |
| 28 | 101 096 | VENTILATION BAFFLE | CONDUIT DE VENTILATION |
| 29 | 101 095 | ABSORBER | TAMPON AMORTISSEUR |
| 30 | 104 124 | BASE | SOCLE |
| 31 | 39 928 | FOOT (x4) | PIEDS (x4) |
| 32 | 27 061 | FINE SERRATED BLADE | COUTEAU DENTE |
| 33 | 27 138 | SERRATED BLADE | COUTEAU CRANTE |
| 34 | 104 122 | VENT COVER | GRILLE DE VENTILATION |
| 35 | R240 | POWER CORD | CABLE D'ALIMENTATION |
| 36 | R277A | SCREEN KIT | GRILLE DE PROTECTION |
| 37 | R286 | CIRCUIT BREAKER | COUPE CIRCUIT |
| 39 | R255 | PLATE RACK | RANGE DISQUE |
| 40 | 502 579 | HONING STONE | PIERRE A AFFÛTER |
| 41 | R239 | MOTOR AO SMITH | MOTEUR AO SMITH |
| 42 | R239D.3 | ADAPTER PLATE FOR EMERSON MOTOR | PLAQUE D'ADAPTATION POUR MOTEUR EMERSON |
| 43 | R239D | MOTOR EMERSON | MOTEUR EMERSON |
| 44 | R222 | CAPACITOR F/C MOTOR (R2N) | CONDENSATEUR F/C MOTEUR (R2N) |
| 45 | R237 | BEARING 6203 AO SMITH MOTOR | ROULEMENT 6203 MOTEUR AO SMITH |
| 46 | R239D.2 | CAPACITOR | CONDENSATEUR |
| 47 | RV30247 | BEARING 6203 EMERSON MOTOR | ROULEMENT 6203 MOTEUR EMERSON |
| 48 | R239D.1 | STARTING RELAY EMERSON MOTOR | RELAIS DE DEMARRAGE MOTEUR EMERSON |



robotcoupe® U.S.A., Inc.

R2N Ultra
 Serial number 231xxxxx03
 247xxxxx03 500xxxxx03

1-Speed, 120 Volt, 1 Phase
 60Hz, 1 HP, 1725 RPM, 7 Amps

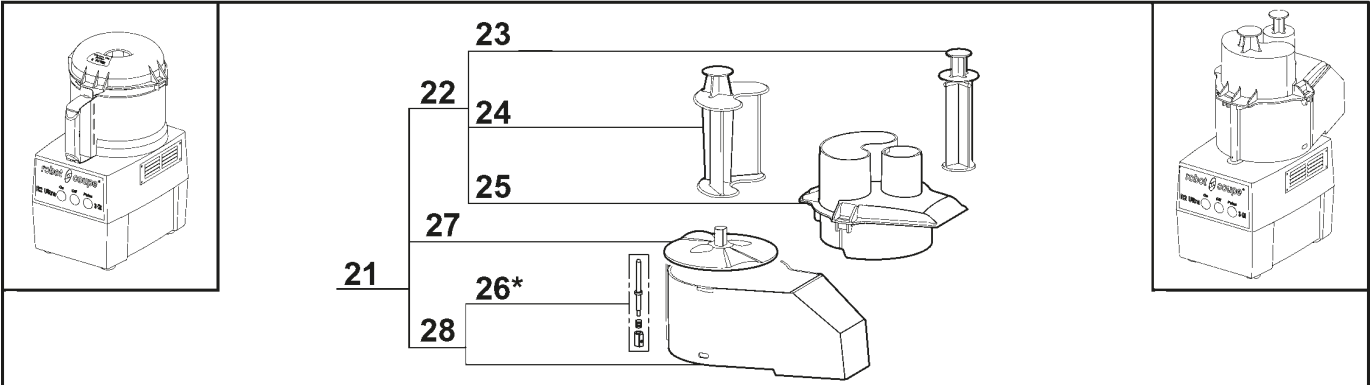

WARNING : Select the spare parts in accordance with the bowl type.
 As the complete bowl or the cutter attachment is fully interchangeable, for all types choose respectively item 5 or 1.

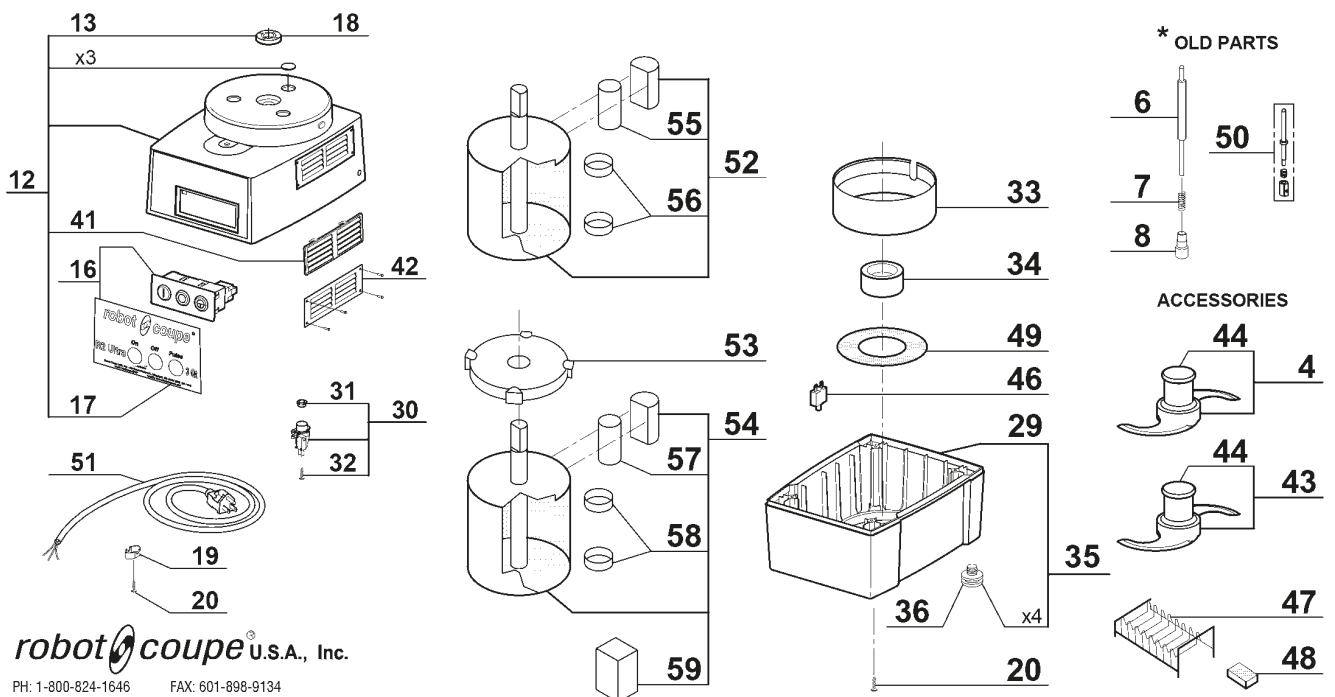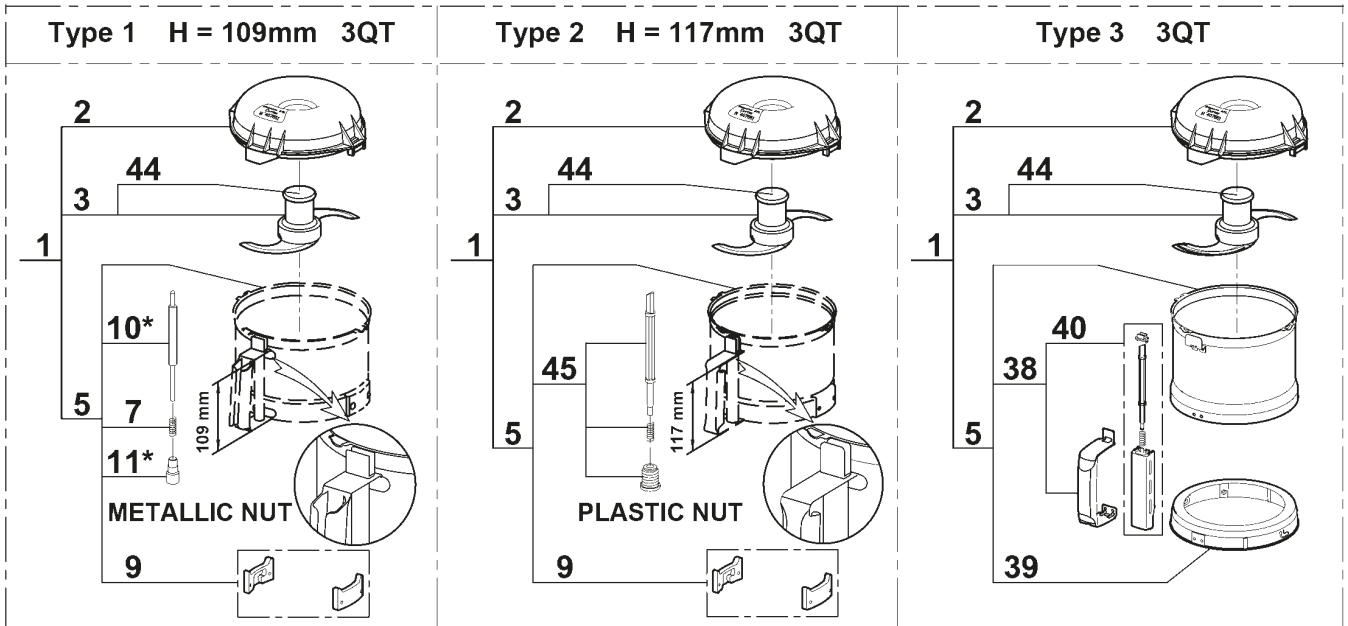

robotcoupe® U.S.A., Inc.
 PH: 1-800-824-1646 FAX: 601-898-9134
 email: info@robotcoupeusa.com

| Index | Pièce / Part | Description |
|-------|----------------|---|
| 1 | 27 243 | CUTTER ATTACHMENT |
| 2 | 105 236 | CUTTER LID |
| 3 | 27 055 | STRAIGHT BLADE |
| 4 | 27 061 | FINE SERRATED BLADE |
| 5 | 39 795 | CUTTER BOWL ASSEMBLY |
| 6 | 101 084 | PLASTIC SAFETY ROD FOR BOWL 2.5 QT |
| 7 | 100 964 | SPRING |
| 8 | 101 360 | STAINLESS STEEL NUT FOR BOWL 2.5 QT |
| 9 | 29 184 | LOCKING PLATES ASSEMBLY |
| 10 | 104 098 | PLASTIC SAFETY ROD FOR BOWL H = 109m TYPE 1 3 QT |
| 11 | 104 050 | STAINLESS STEEL NUT FOR BOWL H = 109m TYPE 1 3 QT |
| 12 | 39 109 | MOTOR SUPPORT ASSEMBLY |
| 13 | 501 010 | SHAFT SEAL |
| 16 | 39 107 | CONTROL PANEL ASSEMBLY |
| 17 | 407 670 | FRONT PLATE |
| 18 | 101 103 | BOLT COVER |
| 19 | 101 106 | POWER CORD CLIP |
| 20 | 200 005 | SCREW 3,9 x 19 |
| 21 | 27 242 | VEGETABLE SLICER ASSEMBLY |
| 22 | 39 104 | LID + PUSHERS ASSEMBLY |
| 23 | 103 281 | ROUND PUSHER |
| 24 | 103 280 | VEGETABLE PUSHER |
| 25 | 118 592 | VEGETABLE SLICER LID |
| 26 | 29 858 | GREY VEGETABLE SLICER BOWL SAFETY ROD ASSEMBLY |
| 27 | 103 288 | SLINGER PLATE |
| 28 | 102 699 | VEGETABLE SLICER BOWL ASSEMBLY |
| 29 | 104 124 | BASE |
| 30 | 29 919 | MICROSWITCH ASSEMBLY |
| 31 | 500 527 | SEAL RING |
| 32 | 200 003 | SCREW 3,5 x 12,7 |
| 33 | 101 096 | VENTILATION BAFFLE |
| 34 | 101 095 | ABSORBER |
| 35 | 39 865 | BASE ASSEMBLY |
| 36 | 39 928 | FOOT ASSEMBLY (x4) |
| 38 | 39 763 | BOWL HANDLE ASSEMBLY |
| 39 | 39 753 | LOCKING WASHER ASSEMBLY |
| 40 | 39 762 | SAFETY ROD ASSEMBLY FOR BOWL TYPE 3 |
| 41 | 104 122 | VENT COVER |
| 42 | 101 098 | VENT COVER + RIVETS |
| 43 | 27 138 | SERRATED BLADE |
| 44 | 117 058 | BLADE CAP |
| 45 | 39 220 | SAFETY ROD ASSEMBLY FOR BOWL H = 117m TYPE 2 3 QT |
| 46 | R286 | CIRCUIT-BREAKER |
| 47 | R255 | PLATE RACK |
| 48 | 502 579 | HONING STONE |
| 49 | R277A | SCREEN KIT |
| 50 | 29 007 | WHITE VEGETABLE SLICER BOWL SAFETY ROD ASSEMBLY |
| 51 | R240 | POWER CORD |
| 52 | R239 | MOTOR AO SMITH |
| 53 | R239D.3 | ADAPTER PLATE FOR EMERSON MOTOR |
| 54 | R239D | MOTOR EMERSON |
| 55 | R222 | CAPACITOR F/C MOTOR (R2N) |
| 56 | R237 | BEARING 6203 AO SMITH MOTOR |
| 57 | R239D.2 | CAPACITOR |
| 58 | RV30247 | BEARING 6203 EMERSON MOTOR |
| 59 | R239D.1 | STARTING RELAY EMERSON |


Model R2N and R2N Ultra with Emerson motor R239D

R2N Serial Numbers: 244xxxxx03 & 246xxxxx03

1/2 HP, 115 V, 60 Hz, 1725 RPM 6.8 Amp

R2N Ultra Serial Numbers: 245xxxxx03 & 247xxxxx03

1/2 HP, 115 V, 60 Hz, 1725 RPM 6.8 Amp

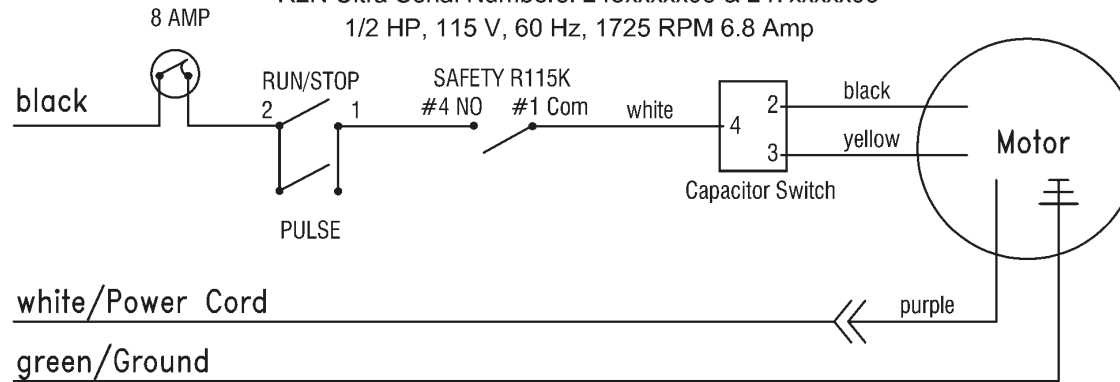


Model R2N and R2N Ultra with A. O. Smith / Magnetek Motor R239

R2N Serial Numbers: 244xxxxx03 & 246xxxxx03

1/2 HP, 115 V, 60 Hz, 1725 RPM 6.8 Amp

R2N Ultra Serial Numbers: 245xxxxx03 & 247xxxxx03

1/2 HP, 115 V, 60 Hz, 1725 RPM 6.8 Amp

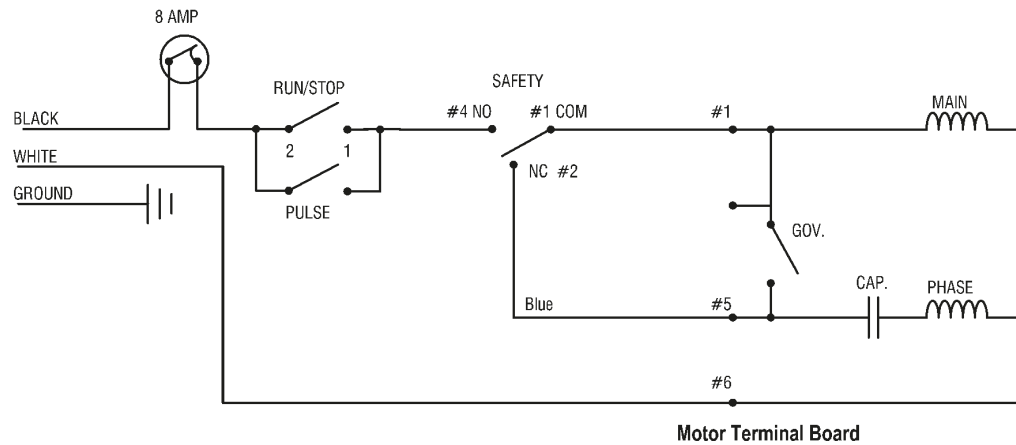



robot coupe[®]

Robot Coupe U.S.A., Inc.,

Phone: 800/824-1646 • 601/898-8411

Fax: 601/898-9134

264 South Perkins St., Ridgeland, MS 39157

e-mail: info@robotcoupeusa.com

website: www.robotcoupeusa.com