



1000W Commercial Microwave



Model: 180MW1000SS

10/2024

Please read and keep these instructions. Indoor use only.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical equipment, basic safety precautions should be followed to reduce the risk of burns, electrical shock, fire, or injury to persons.

READ all of the instructions before using this equipment.

1. This equipment **MUST BE GROUNDED**. Connect only to properly **GROUNDED** outlet. See "GROUNDING INSTRUCTIONS" on page 3 for further details.
2. Use this equipment **ONLY** for its intended use as described in this manual. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
3. **DO NOT** heat items able to explode in this microwave, such as eggs, sealed containers, glass jars, etc.
4. **DO NOT** operate this equipment if the cord, plug, and/or door is damaged, it is not working properly, or if it has been damaged or dropped.
5. This equipment, including power cord, must be serviced **ONLY** by qualified service personnel. Contact the nearest authorized service facility for examination, repair, or adjustment.
6. **DO NOT** cover or block filter or other openings on equipment.
7. **DO NOT** store this equipment outdoors.
8. **DO NOT** use this product near water or immerse the cord and/or plug in water.
9. Keep cord **AWAY** from **HEATED** surfaces.
10. **DO NOT** let cord hang over edge of table or counter.
11. **DO NOT** overcook food as to avoid fire in oven cavity.
12. If materials inside the oven ignite, keep oven door **CLOSED**, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
13. **DO NOT** use the cavity for storage.
14. Do not overheat liquids.
15. After heating, allow the container to stand in the microwave oven for a short time before removing the container.
16. **DO NOT** operate equipment without load or food in oven cavity.
17. **DO NOT** use metal utensils in oven.
18. **NEVER** use paper, plastic, or combustible materials that are not intended for cooking.
19. Clean oven regularly and remove any food deposits.
20. For commercial use only.
21. **WARNING:** This microwave must be installed at or above countertop level. The bottom of the door opening must be at least 36" (91.4cm/914mm) off the ground.

WARNING

This device complies with part 18 of the FCC Rules. FCC RF Exposure Requirements:
This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

To avoid risk of electrical shock or death, this oven must be grounded.
To avoid risk of electrical shock or death, do not alter the plug.
Hot contents can cause severe burns. Do not allow children to use this product.
Use caution when removing hot items.

OPENING YOUR NEW OVEN

1. Inspect oven for any damage, such as cracks or dents in door or inside oven cavity.
2. Remove all materials from oven interior.
3. Remove all plastic wrap and packaging material before use.
4. Do not install oven next to or above source of heat, such as pizza oven or deep fat fryer. This could cause the microwave oven to operate improperly and could shorten life of electrical parts.
5. Install oven on a level countertop surface with a minimum installation height of 36".
6. Outlet should be located so that the plug is accessible when oven is in place.

GROUNDING INSTRUCTIONS


 
 



Oven **MUST** be grounded. Grounding reduces risk of electric shock by providing an escape wire for the electric current if an electrical short occurs. This oven is equipped with a cord having a ground wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. Do not use an extension cord.

OPERATION INSTRUCTIONS


Turning The Oven On:

- "-- --" displays when the oven is powered up for the first time.



Time Entry:

- The user may manually enter a cook time and power level while in this mode.
- During Ready Mode, the LED displays "0:00."
- While the oven is in the Ready Mode, pressing the  key will put the oven into Time Entry Mode; "00:00" will display.
- Press the , , or  key to select power level; the LED will display the related power. If the same key is pressed twice, the power will change to PL10 (power level 10, or full power). If no power is chosen, PL10 is the default.
- During setting process, press the  key to enter Time Entry Mode and begin cooking. Press the  key to enter Ready Mode.


Manual Cook Mode:

- This mode allows cooking of the food items. While in Manual Cook Entry Mode, pressing the  key will cause the oven to begin Manual Cook Mode.
- During this mode, cooking time displays, the fan operates, and the oven light will be on.

OPERATIONAL CLEARANCES

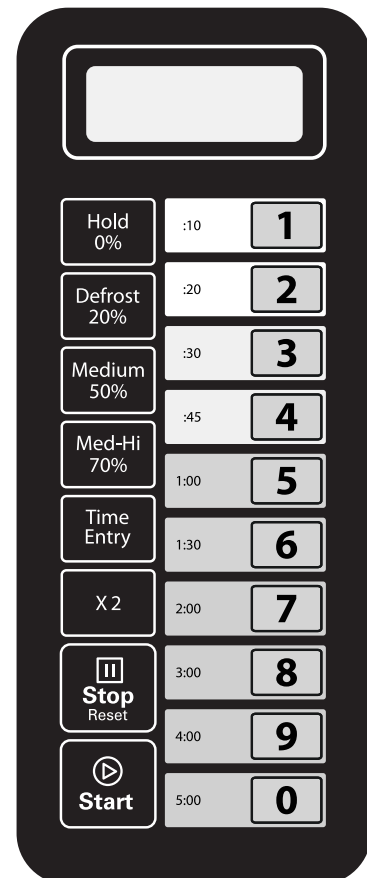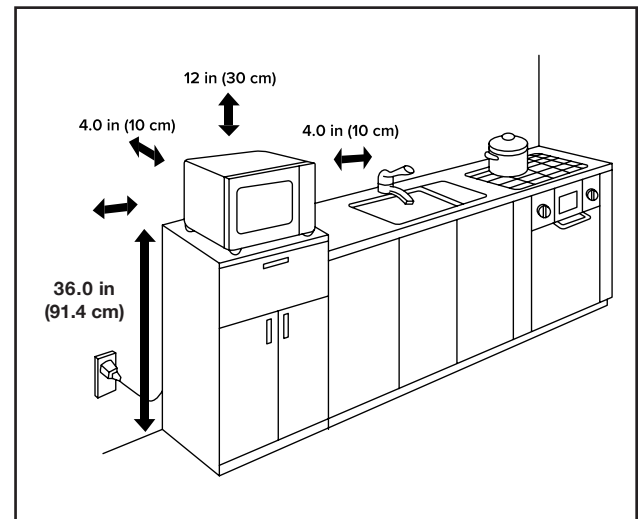



Programming Mode


1. This mode allows the user to assign cook times and power levels to the keypad number keys.
2. Open the door and press and hold Number Key 1 for 5 seconds. The buzzer sounds once to indicate. Programming Mode is activated.
3. LED displays "ProG". Program settings are now ready to be entered.
4. Selected desired number, 0-9, for the programmed setting.
5. Press the number keys, LED will display the saved time.
6. Select desired power level. LED will display the related power. If no power chosen, the maximum power level, 100%, is the default.
7. After setting the time and power, press the  key to save the cooking program. LED displays "ProG".
8. Close the door and the oven will return to Ready Mode.

Example:

For a cook setting of 1 minute and 15 seconds at 50% power under the number 4 key.

1. Open oven door and press Number Key "1" for 5 seconds, LED displays "ProG".
2. Press Number Key "4". The program will be saved in "4".
3. Press Number Keys "1", "1" and "5" to input the cooking time, LED displays 1:15.
4. Press the  key to input 50% power level. LED displays "PL5".
5. Press  key to save.
6. Close oven door.

To use this program press "4". The oven will start operating for 1:15 at 50% power.

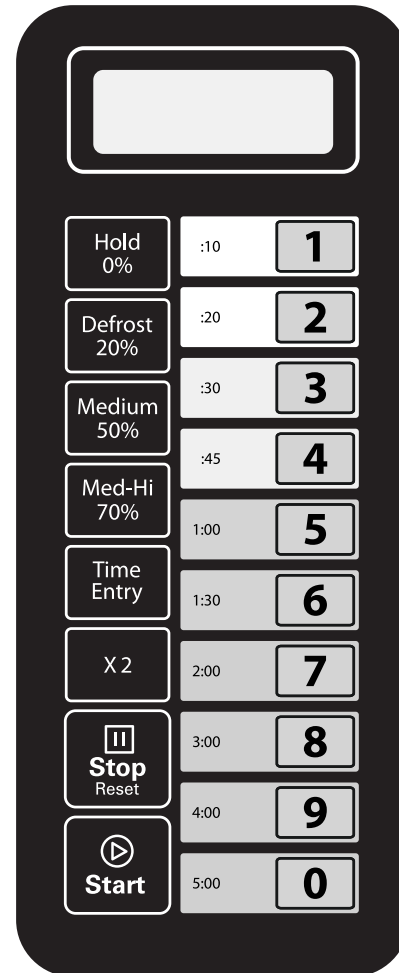

User Option Mode

1. Open the oven door and press 2 for 5 seconds. The buzzer will sound and the oven will enter User Option Mode.
2. "OP: - -" will be displayed.
3. Press any number button to enter related mode setting.
For example: To set the volume of the buzzer to medium, press 2; "OP: 22" will be displayed. If you want to change, keep pressing 2. The LED will display "OP: 20," "OP: 21," "OP: 22," "OP: 23," "OP: 20" in cycle.
4. Press the green "START/CONFIRM" button to save the current setting. After it is saved, "OP: - -" will display again.
5. If the green "START/CONFIRM" button is NOT pressed at the last step, the program will NOT be saved and it will revert to its previous setting.
6. During the setting process, press red "STOP/RESET" button to enter Door Open Mode. Closing the door will enter Ready Mode.

USER OPTIONS

Bold = Default

OPTION	SETTING	DESCRIPTION
1: End of Cooking Tone	OP: 10	3 Second Beep
	OP: 11	Continuous Beep
	OP: 12	5 Quick Beeps, Repeating
2: Beeper Volume	OP: 20	Beeper Off
	OP: 21	Low
	OP: 22	Medium
	OP: 23	High
3: Beeper On/Off	OP: 30	Beeper Off
	OP: 31	Beeper On
4: Keyboard Input Time Window	OP: 40	15 Seconds
	OP: 41	30 Seconds
	OP: 42	60 Seconds
	OP: 43	120 Seconds
5: On The Fly	OP: 50	Disabled
	OP: 51	Enabled
6: Door Reset	OP: 60	Disabled
	OP: 61	Enabled
7: Maximum Cook Time	OP: 70	60 Minutes
	OP: 71	10 Minutes
8: Manual Programming	OP: 80	Disabled
	OP: 81	Enabled
9: Double Digit	OP: 90	Single Digit Mode - 10 Programs
	OP: 91	Double Digit Mode - 100 Programs

CARE AND CLEANING

To avoid electrical shock that can cause severe personal injury or death, unplug power cord or open circuit breaker to oven before cleaning or removing lightbulb.

- Cleaning the interior and exterior will require a mild detergent, water, and a soft sponge or cloth.
- Do not use cleaners that include ammonia or citrus.
- Do not use water pressure cleaning systems on your microwave.
- Inspect air vents monthly and clean using a damp cloth.

TROUBLESHOOTING

COMPLAINT	POSSIBLE CAUSE	REMEDY
Dim oven light.	Cooking at low power level.	This is normal.
Steam forms on oven door.	When cooking foods in a microwave, steam is generated.	This is normal.
Hot air expelled from vents.	Foods cooking in a microwave may release heat.	This is normal.
Oven does not start.	Power cord not plugged in correctly.	Plug cord into outlet correctly.
	Fuse blown or circuit breaker open.	Replace fuse (should be repaired by authorized servicer) or reset breaker.
	Malfunctioning outlet.	Test outlet with other electrical appliance.
	Door not closed.	Close door.