



Edgewood, New York 11717-8380

© ADVANCE TABCO DECEMBER 2008



Installation Instructions for 16" High Side & Back Splashes for 9-OP Series Mop Sinks



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Mop Sinks manufactured by **ADVANCE TABCO** are designed and constructed for the use of mop cleaning (See Mop sink Instruction Guide). **ADVANCE TABCO** does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

Contents:

Side Splash
Rear Splash
Splash Mounting Hardware

Tools Required:

Drill Motor
1/8" & 3/8" Drill Bits
Center Punch
Screwdriver
7/16" Wrench

Step 1:

Align bottom edge of Side Splash with bottom Seam of Mop Sink. Mark (3) holes. Drill 3/8" diameter holes and mount Side Splash with Hardware provided (**Figure 1**). Repeat opposite side if applicable.

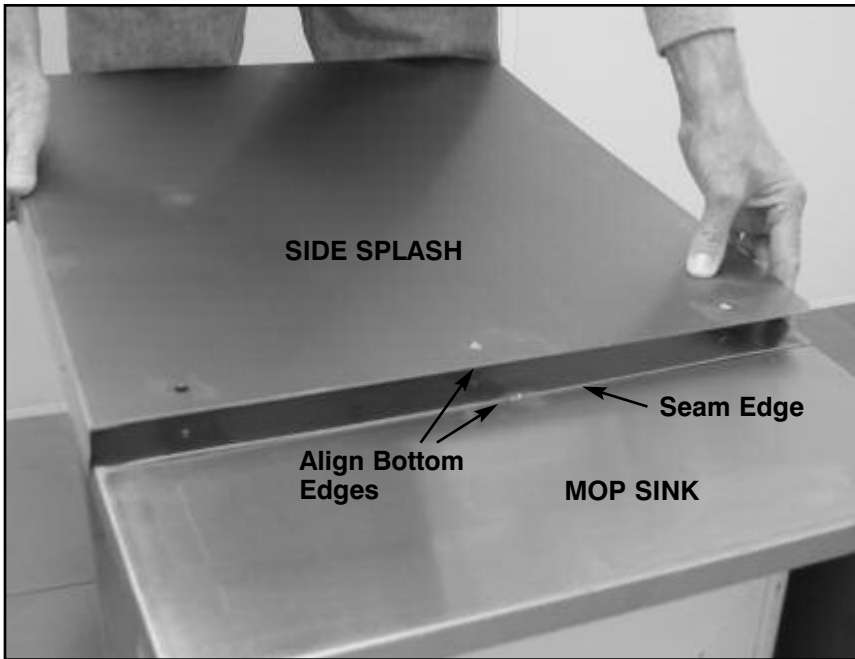


Figure 1

Step 2:

Assemble Mop Sink Drain and position onto 2" IPS Pipe Stub per Mop Sink Installation Guide.

Step 3:

Apply bead of Silicone to Vertical Flange of Side Splash and along Rear Flange of Mop Sink. Position Rear Splash such that offset Flange at bottom fits over Rear Flange of Mop Sink.

Align holes (Rear Splash/Side Splash) and secure to wall. Hardware not provided (**Figure 2 & 3**).

Installer may choose to use adhesive to glue Side/Rear Splash to wall.

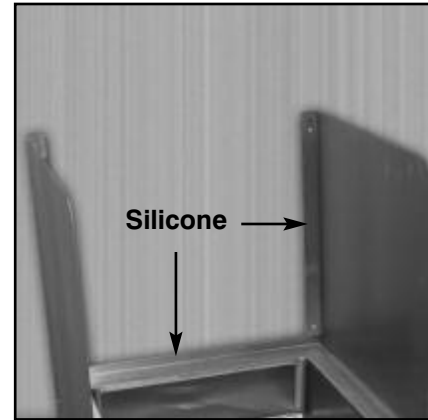


Figure 2



Figure 3

Step 4:

Apply bead of Silicone to vertical and horizontal joints at Side/Rear splash.

Step 5:

Complete Drain installation per Mop Sink Installation Guide.